



### Removal

---


- 1 Set engine hood vertically and place rag under corner of engine hood.
- 2 Secure engine hood by means of a rod.
- 3 Pull out safety device at bottom of hood support.
- 4 Remove hose for windshield washer out of clips on hinge.
- 5 Disconnect draw spring and remove.

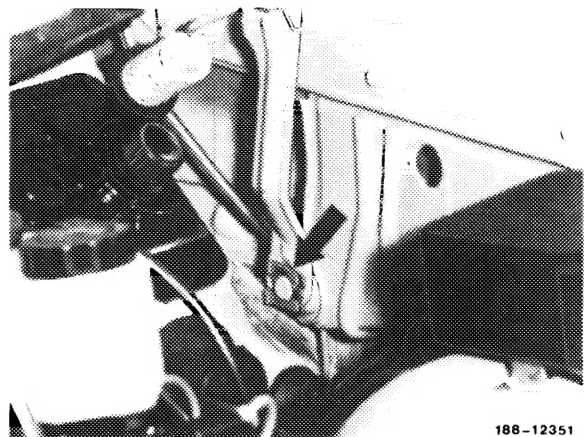

- 6 Unscrew both screws on hinge lever.
- 7 Fold hinge lever completely down.

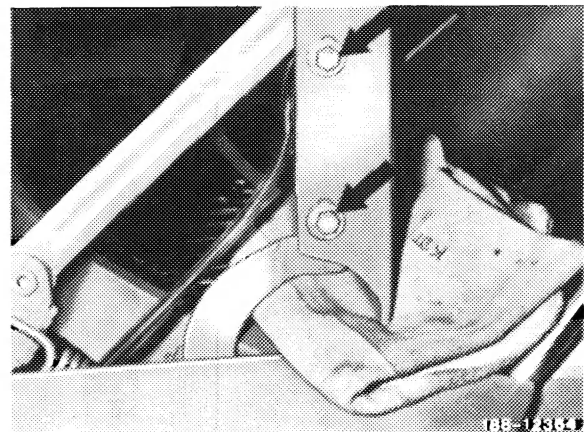

- 8 Remove screw on hinge lever with 13 mm hexagon ratchet or similar tool. For easier handling, extend handle with welding wire or the like.
- 9 Remove hinge including hood support.
- 10 Drill out connecting rivet between hinge and hood support (11 mm dia drill).

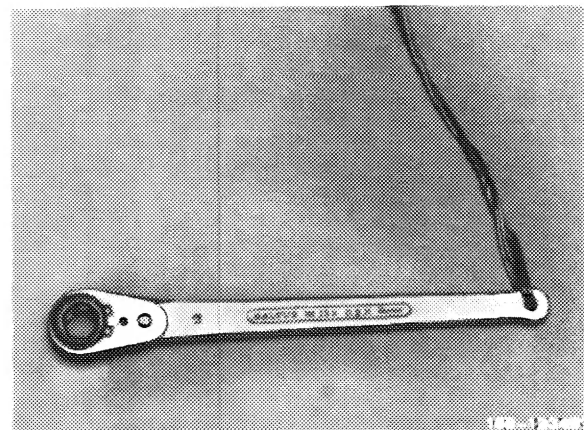


## Installation

11 Insert bushing, washers and screw into new hinge lever.




12 Place hex. ratchet on fastening screw.

13 Introduce all parts together into shaft so that the locating tip of the hex. screw enters the respective nut.

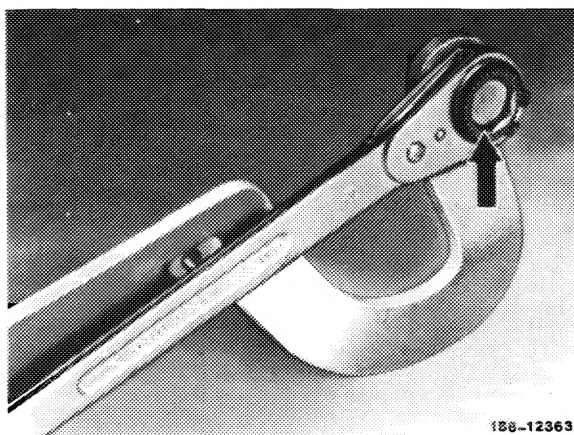

14 Force screw with a screw driver toward nut and tighten with hexagon ratchet.

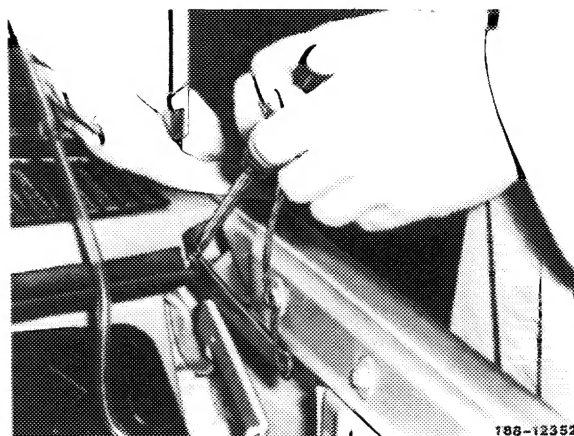

15 Attach hood support with repair screw and nut to hinge. Use existing washer again at the same spot.

16 For further installation proceed vice versa.

